

CARD Reader/Encoder

E3

User Manual

CARD Reader/Encoder E3

Model :	E3
Dimensions :	70mm x 70mm x 26mm
Power interface :	Type-C USB
Power input :	5V/500mA
Radio frequency:	13.56Mhz
Support card type:	MiFare S50

Light/sound status



When the device is powered on:

 
- Green light: Card encoder mode
- Blue light: Card reader mode

Voice prompt on passing a card:

- 🔊 Success on encoding/reading a card:
One short beep

Steps:

- 1 Connect the USB cable with PC



- 2 Plug the USB into the card encoder



- 3 Install drive program for the card encoder

Disclaimer

We continuously optimize products as new technologies and features are developed. For this reason, we reserve the right to make alterations to the products without prior notice.

Kortlæser

E3

Manual

Kortlæser

Model:	E3
Mål:	70mm x 70mm x 26mm
Strømgrænseflade:	Type-C USB
Strømindgang:	5V/500mA
Radiofrekvens:	13.56Mhz
Korttype:	MiFare S50

Lys/lydindikator



Lys:

 
- Grønt lys: Kortkodningstilstand
- Blåt lys: Kortlæsningstilstand

Lys:

- 🔊 Et kort "bip" indikerer en succesfuld aktion

Vejledning

- 1 Tilkobl USB-kablet til PC'en
- 2 Tilslut USB'en til kortlæseren



- 3 Følg softwareinstruktionen for at benytte kortlæseren

Disclaimer

We continuously optimize products as new technologies and features are developed. For this reason, we reserve the right to make alterations to the products without prior notice.