Brugervejledning Smart Nøgleboks

TTLOCK-VERSION



Scan QR-koden nedenfor for at downloade APP'en





Søg i Google Play eller APPLE Store efter TTLOCK



Gør dit liv smartere!

1 TILBEHØRSDELE I PAKKEN

Tjek venligst emballagen og tilbehøret, når du har modtaget produktet.



2 PRODUKTSPECIFIKATION

Frontpanel



Indvendigt





Hovedmateriale	Aluminiumslegering, zinklegering, hærdet glas
Tilgængelig farve	Sort
Installationstype	Vægmontering eller ved hjælp af knoplås med bøjle
Kommunikation	BLE5.0
OS-understøttelse	iOS 7.0 eller nyere, Android 4.3 eller nyere
Batteriets levetid	5000 gange normal oplåsning (10-12 måneder)
Strømforsyning	DC6V: 4 stk. AAA alkaline-batterier
Statisk strøm	<80 uA
Dynamisk strøm	<200 mA
Oplåsningsmåde	APP, adgangskode, kort, manuel nøgle, fingeraftryk
Oplåsningstid	1~1,5 sekunder
Driftstemperatur	-20~55 grader
Driftsfugtighed	20%~95%
Fabriksindstillet	Fabriksindstillet masteradgangskode:123456, efter
adgangskode	konfiguration vil den være ugyldig
Virtuel adgangskode	Tilgængelig
IP-niveau	IP65-certificeret
Brugerkapacitet	Fingeraftryk: 100; adgangskode: 250 og kort: 1000.

4 NULSTIL TIL FABRIKSINDSTILLING

5

Tryk indstillingsknappen gennem indstillingshullet med en lille pind med en diameter på mindre end 2,5 mm. (f.eks. en tandstikker)

Nulstillingsknap

BEMÆRK

Der er en nulstillingsknap på bagsiden af frontpanelet. Når enheden er tændt, skal du trykke på knappen i 3 sekunder, og en stemme siger derefter "Indtast initialiseringsadgangskoden ($000 \sqrt{}$)" (Please enter the initialization passcode ($000 \sqrt{}$)).

Hvis adgangskoden er indtastet korrekt, gives der et signal "Administratoren er slettet". Derefter er standard hovedadgangskoden 123456. Indtast venligst adgangskoden for at låse nøgleboksen op.



⁵ INSTALLATIONSTRIN

5.1 Vægmontering

Fastgøres på væggen i en passende højde fra jorden.

5.1.1 Vægmontering (murstensvæg)









5.1.2 Vægmontering (træ)



5.1.3 Montering af batterier

Sæt 4 stk. AAA alkaline-batterier i, og skru dækslet til batteriboksen fast.



5.1.4 Funktionstest

*Luk beskyttelsesdækslet - følg pilens retning. *Tryk på fingeraftryk eller adgangskode for at låse nøgleboksen op.

5.1.5 Test af nøgle

*Test nøglen for at låse korrekt op *Læg ikke nøglerne ind i boksen





5.2 Hængende enhed

5.2.1 Tag prop- 5.2.2 Montering af perne ud batterier

Sæt 4 stk. AAA alkaline-batterier i, og skru dækslet til batteribok-sen fast.







5.2.3 Låsning med bøjle -knap

Spænd bøjlen og lås boksen i pilens retning.

5.2.4 Oplåsning af bøjle -knap

Skub knappen opad, afmonter derefter låseboksen og bøjlen.



5.2.5 Funktionstest

-knap

*Luk beskyttelsesdækslet - følg pilens retning.

*Tryk på fingeraftryk eller adgangskode for at låse nøgleboksen op.



5.2.6 Nøgletest -knap

*Test nøglen for at låse korrekt op

*Læg ikke nøglerne ind i boksen



6 TTLOCK APP-indstillinger

Download TTLOCK fra Apple Store eller Google Play. Du kan også scanne QR-koden nedenfor for at downloade APP'en direkte.



6.1 Tilmelding: Opret venligst en konto med din e-mail eller dit mobilnummer.

Email Phone vultivity Region	Email Ph Country/Region	one China+86 >	Phone Number or Email New Password	
Email Phone >	Email Ph	China+86 >	New Password	
untry/Region >	Country/Region	China+86 >		
			Y Confirm Password	
Enter your Email	18024212836	•	Your password must have 8-20 chara minimum of two types of numbers, le	acters, and include a etters and symbols
Password	Password		Verification Code	Get Code
Confirm Password	P Confirm Password			
ur password must have 8-20 characters, and slude a minimum of two types of numbers, letters d symbols	Your password must have 8-20 cha include a minimum of two types of r and symbols	racters, and humbers, letters	Reset Passw	ord
Verification Code Get Code	Verification Code	Get Code		
	A V Password	Done		
Register	Register			
Prive read and agreed User Terms Privacy Policy	Policy	ms Privacy		

6.1.1 Tilmeld dig og registrer dig med mobil eller email 6.1.2 Indtast mobil- eller mail-login med den rigtige adgangskode 6.1.3 Du kan nulstille din adgangskode

6.2 Konfigurer låsen

Start TTLOCK-APP'en, og klik på "Tilføj lås" (Add LOCK) i venstre side af systemindstillingerne, og følg trinene for at konfigurere låsen med APP'en:





Trin 4 Tilføjelse af lås lykkedes Omdøb låsen

Choose L	ock Type		C Nearby Locks
			T3_7ec737
All Locks Scan all types of	flocks	>	A29_98#311 (0)
- Door Lock >	A Padlock	>	G S1-KM_c60a74(Added) @
	Lask		A29_0fa8be @
Safe Lock >	Cylinder	2	● M102_8698c2 ①
Parking > Lock	Bicycle Lock	>	K101C_ee2807(Added) @
Remote >			G K3BLE_78d295 ∅
			A29_51689b(Added) @
			5534_6ede58 (0)
		J	51-1_a010e8(Added) (0)
Tr	in 2	_	Trin 3

100%

Klik<u>på "Alle låse" (All Lo</u>cks) Lever handle lock 1 R eKev: 2 uthorized Admin

Tryk på + Vælg den første lås



Under Låseindstillinger kan du se funktionerne for SmartLåse, såsom eNøgler/IC-kort/Fingeraftryk/ Fjernoplåsning, registrering af oplåsning og indstillinger OSV.



Der er mange specielle funktioner under TTLOCK APP-indstillingerne. Du kan foretage indstillingerne i henhold til dine daglige behov.

\leftarrow	Settings	
Basics		
Wireless Keypad		
Door Sensor		
Remote Unlock		Off
Auto Lock		5s
Passage Mode		Off
Lock Sound		On
Reset Button		On
Lock Clock		
Diagnosis		
Upload Data		
Import from another	lock	
Firmware Update		

19

Trin 5

Færdig

6.4 Registrer brugers fingeraftryk

Under Låseindstillinger kan du klikke på "Fingeraftryk" (Fingerprints) og registrere fingeraftrykket. Der er permanente/tidsbestemte og tilbagevendende fingeraftryk til forskellige forhold.



Trin 3 Klik på Start



Trin 4 Tryk på fingeraftryk 4 gange

6.5 Registrer brugers adgangskode

Under Låseindstillinger kan du klikke på "Adgangskoder" (Passcodes) og registrere adgangskoderne. Der er permanen-te/tidsbestemte og tilbagevendende adgangskoder til forskellige forhold.



6.6 Tilmeld eNøgler



Under Låseindstillinger, kan du klikke på indstillingen "eNøgler" (eKeys) og udstede eNøglen til en anden modtager.

Der findes permanente/tidsbegrænsede og tilbagevendende eNøgler til forskellige forhold.

Trin I Send eNøgle

	Send	d eKey	
Timed	Permanent	One-time	Recurring
Recipient		13924	939063 🚺
Name			Mr
Start Time		20	23-05-24 11:
End Time		20	23-07-24 11:
Recipients within the v	are able to use alidity period.	the eKeys for u	unlimited time
	S	end	
		Send n	nultiple ekey



6.7 Gennemgangs-tilstand

Under Låseindstillinger kan du markere "Gennemgangs-tilstand" (Passage Mode), under denne indstilling vil låsen altid være i åben tilstand. Du kan også deaktivere gennemgangstilstanden i APP'en.

\leftarrow	Settings)
Basics		
Wireless Keypad		
Door Sensor		
Remote Unlock		Off
Auto Lock		5s
Passage Mode		Off
Lock Sound		On
Reset Button		On
Lock Clock		
Diagnosis		
Upload Data		
Import from another	lock	
Firmware Update		



7. Nulstil låsen

Under Låseindstillinger kan du klikke på knappen "Slet" for at nulstille administratoradgangskoden. Låsen indstilles til fabriksindstillingen, og du kan låse nøgleboksen op med adgangskode: 123456.

Or

•	assage mode
	Lock Sound
	Reset Button
	Lock Clock
	Diagnosis
	Upload Data
	Import from another lock
	Firmware Update
	Amazon Alexa
	Google Home



Trin 2 Vælg tidsbestemt type

8. Fjernoplåsningsfunktion (med gateway)

Wi-Fi-gatewayen er et krav for at kunne aktivere fjernoplåsningsfunktionen, se venligst parametrene nedenfor:

Model: G2

Dimension: 70x70x26 mm Netværk: Wi-Fi 2.4G IEEE Standard: 802.11b/g/n Strømgrænseflade: Type C USB Strømforsyning: DC5 v/500 mA

Lysstatus

	Når gatewayen er tændt:
	Lyset blinker skittevis rødt og blat.
	Standby-tilstand, klar til tilslutning.
2	Blåt lys: Driftstilstand
	 Rødt lys: Netværksfejl

8.1 Parring af gatewayen med APP'en



Tilføj gateway

🖲 Vælg V	WiFi oa in	dtast a	dgangskode
	← Add Gat	eway	
	WIFI	>	
	WiFi passw	/ord	
	Gateway n cancel netw	ame ^{/ork}	
	✓ sene mywi	(i• (ii•	
	0		

Afslut parring af gateway

Bemærk: Hvis forbindelsen afbrydes, skal du tænde for gatewayen og prøve igen.

8.2 Fjernoplåsning

Under Låseindstillingen skal du først slå fjernoplåsningsfunktionen til som vist på billedet nedenfor. Derefter kan du klikke på oplåsningstegnet nær den runde cirkel, der er et tip til fjernoplåsning. Du kan klikke på det og låse døren op på afstand.





9. Fejlfinding og løsning (FAQ)

Spørgsmål I:

Kan jeg låse døren op med mit fingeraftryk første gang?

Svar: Ja. Når du er færdig med installationen og tænder for låsen med 4 stk. AAA alkaline-batterier kan du trykke på med et hvilket som helst fingeraftryk for at låse døren op. Det sikrer, at du kan få adgang til døren, før du konfigurerer låsen med mobiltelefonens APP.

Spørgsmål 2: Hvilken slags batteri skal man bruge?

Svar: Det anbefales på det kraftigste, at denne lås forsynes med 4 stk. AAA alkaline-batterier. Brug ikke andre batterier eller andre Zn/Mnbatterier!

Spørgsmål 3: Er låsen automatisk låst?

Svar: Ja. Når du har låst døren op én gang, vil døren vente på at blive låst efter 5 sekunder. Luk "frontpanelet" for at låse.

Spørgsmål 4:

Jeg har købt en lås til min ven, hvordan kan han tilføje låsen med sin mobil?

Svar: Fjern venligst denne enhed fra din APP. Du kan klikke på »Slet« (Delete) for at nulstille låsen eller nulstille låsens hardware, se side 5 for detaljer.

Spørgsmål 5:

Jeg sætter den manuelle nøgle i og drejer, men jeg kan ikke låse døren op.

Svar: Sæt den manuelle nøgle i, og åbn og luk panelet for at låse op, se billedet nedenfor:



Spørgsmål 6:

Er det muligt at fjernoplåse min dør?

Svar: Ja. Der kræves en ekstra gateway til fjernoplåsning. Henvend dig til vores salgsservice. Efter konfigurationen kan du trykke på ikonet i APP'en for at fjernoplåse, se venligst side 25.

User Manual-Smart Keybox

TTLOCK VERSION







Search Google Play or APPLE Store with TTLOCK



Smart your life!

Version 1.0 K5-TTBLE Edition 2023

1 PACKING ACCESSORIES

Please check the packing box and accessories when you got the product in hand.



2 PRODUCT SPECIFICATION

Front



Inside



3 SYSTEM INTRODUCTION

Main material	Aluminum alloy, zinc alloy, tempred glass
Available Color	Black
Installation Type	Wall mounting or work with knob lock by shackle
Communication	BLE5.0
Support OS	iOS 7.0 or above, Android 4.3 or above
Battery Life	5000 times normal unlock(10-12 months)
Power Supply	DC6V:4pcs AAA alkaline batteries
Static Current	≪80uA
Dynamic Current	<200mA
Unlock Way	APP,Passcode,Card,Manual key,Fingerprint(optional)
Unlock Time	1~1.5 seconds
Working Temperature	-20~55 degree
Working Humidity	20%~95%
Factory Password	Factory master password:123456,
	arter configuration, it will be invalid
Virtual Password	Available
IP Level	IP65 Certificated
User Capacity	Fingerprint: 100; Passcode: 250 and Card: 1000.

4 RESET TO FACTORY STATE



ATTENTION

There is a reset button on the back of the front shell; After the device is powered on, long press the button for 3 seconds, and the voice prompts "Please enter the initialization passcode (000 \checkmark)"; If the passcode is successfully entered, there is sound tip "Delete Administrator successfully". Then default master password is 123456. Please enter the passcode to unlock the key box.



Factory State: Default password 123456+√to unlock.



5 INSTALLATION STEPS

5.1 Wall mount

Fixed on the wall, the line must be at a suitable height from the ground

5.1.1 Wall Mount(Brick wall)









5.1.2 Wall mount(Plank)



5.1.3 Battery mounting

Put 4pcs AAA alkaline batteries and fix the battery box cover.



5.1.4 Functional test

*Turn over the protection cover follow the arrow direction. *Press fingerprint or passcode to unlock the key box.

5.1.5 Key test

*Test the key to unlock properly *Don't put the keys inside the box





5.2 Hanging Garment

5.2.1 Unplug

Rubber plug

M

N

5.2.2 Battery mounting

Put 4pcs AAA alkaline batteries and fix the battery box cover.





5.2.3 Shackle Locking -knob

Buckle the shackle and lock box in the direction of the arrow.

5.2.4 Shackle unlock -knob

Push the button to the top, then detach the lock box and shackle.



5.2.5 Functional Test -knob

*Turn over the protection cover follow the arrow direction. *Press fingerprint or passcode to unlock the key box.



5.2.6 Key Test-knob

*Test the key to unlock properly *Don't put the keys in the box



6 TTLOCK APP Settings

Please download the TTLOCK on Apple store or Google play. also you can scan the QR code below to download the APP directly.



6.1 Register: Please register one account with your E-mail or mobile number.

- Register	\leftarrow Register	C Reset Password
		Phone Number or Email
Email Phone	Email Phone	Password
Country/Region >	Country/Region China+86	P Confirm Password
Enter your Email	18024212836	Your password must have 8-20 characters, and include a minimum of two types of numbers, letters and symbols
Password	Password	Verification Code Get Code
Confirm Password	Confirm Password	
Your password must have 8-20 characters, and include a minimum of two types of numbers, letters and symbols	Your password must have 8-20 characters, and include a minimum of two types of numbers, letters and symbols	Reset Password
Verification Code Get Code	Verification Code Get Code	
	A V Password Done	
Register	Register	
⊘ I've read and agreed User Terms Privacy Policy	I've read and agreed User Terms Privacy Policy	

6.1.1 Sign up and Register with mobile or Email

6.1.2 Enter mobile or mail Login with right password

6.1.3You can reset your password

6.2 Configure the Lock

Please run the TTLOCK APP and click "**Add LOCK**" on the left side of system setting and follow th steps to configure the lock with APP:



Step 1 Add Lock



Step 4 Add Lock Successfully Rename the lock

All Locks > Door Lock > Safe Lock > Safe Lock > Cock > Branding > Branding > Remote >	\leftarrow Cho	ose L	ock Ty	pe	
Door Lock >> Or Lock >> Or Lock >>	All Loci Scan all	(S types of	locks		>
Sate Lock > Parking > B Remote >	- Door Lock	>	8	Padlock	>
Parking >> Bicycle >> Bicycle >> Bicycle >> Bicycle >>	Safe Lock	>	30	Lock Cylinder	>
Remote >	Parking Lock	>	ō	Bicycle Lock	>
	Remote Control	>			

Step 2 Click "All Locks"



Step 5 Done

G	T3_7ec737	+
G	A29_98a311 ①	
G	S1-KM_c60a74(Added) ①	
G	A29_0fa8be ①	
G	M102_8698c2 ①	
G	K101C_ee2807(Added) ③	
G	K3BLE_78d295 ①	
G	A29_51689b(Added) ①	
G	S534_6ede58 ①	
G	S1-1_a010e8(Added) ()	

Step 3 Press+ Choose First Lock

6.3 Function Description

Under lock settings, you can see the features for the smart locks, such as eKeys /IC card/ Fingerprint/Remote Unlockunlock records and settings etc.



There are many special features under the TTLOCK APP settings. you can make the setting according to your daily requirement.

	Settings	
Basics		
Wireless Keypad		
Door Sensor		
Remote Unlock		Off
Auto Lock		5s
Passage Mode		Off
Lock Sound		On
Reset Button		On
Lock Clock		
Diagnosis		
Upload Data		
Import from another	lock	
Firmware Update		

19

6.4 Enroll User Fingerprint

Under the lock setting, you can click the "**Fingerprints**" and enroll the fingerprint. There is permanent/timed and recurring fingerprint for different condition.





Step 1 Add Fingerprint



Step 3 Click Start

Step 2 Choose Permanent Type



Step 4 Press fingerprint 4 times

6.5 Enroll User Passcode

Under the lock setting, you can click the option"**Passcodes**" and enroll the passcodes. There is permanent /timed and recurring passcodes for different condition.





Step 3 Generate Passcode



Step 2 Choose Timed Type



Step 4 Share by SMS or Email

6.6 Enroll eKeys



Under the lock setting, you can click the option"**eKeys**" and issue the eKey to other recipient. There is permanent /timed and recurring eKeys for

different condition.

Step 1 Send eKey

لان لا	Senr	leKev	
Timed	Permanent	One-time	Recurring
Recipient		13924	939063 🕚
Name			Mr
Start Time		20	23-05-24 11:3
End Time		20	023-07-24 11:3
Recipients within the v	are able to use validity period.	the eKeys for u	unlimited times
	S	end	
		Send n	nultiple ekey

Step 2

Choose Timed Type



Step 3 Complete, you can share with SMS to recipient

6.7 Passage Mode

Under the lock setting, you can tick"**Passage Mode**", under this setting the lock will be in always open state, you can disable the passage mode in the APP too.

\leftarrow	Settings	
Basics		
Wireless Keyp	ad	
Door Sensor		
Remote Unloc	k	Off
Auto Lock		5s
Passage Mode	,	Off
Lock Sound		On
Reset Button		On
Lock Clock		
Diagnosis		
Upload Data		
Import from a	nother lock	
Firmware Upd	ate	J



7. Reset the Lock

Under Lock Settings, you can click the "Delete" button to enter the administrator password reset, the lock will be set to the factory state, you can unlock the keybox with the password: 123456.

assage mode	01
Lock Sound	On)
Reset Button	On)
Lock Clock	;
Diagnosis	
Upload Data	2
Import from another lock	2
Firmware Update	>
Amazon Alexa	
Google Home	>
Attendance	0
Unlock Notification	
Delete	



8.Remote Unlock Function(with Gateway)

The Wi-Fi gateway is a must to enable the remote unlock function, please refer the parameters below:

Model: G2

Dimension: 70x70x26mm Network: Wi-Fi 2.4G IEEE Standard: 802.11b/g/n Power Interface: Type C USB Power Input: DC5v/500mA

Light Status

5

When the gateway is power on:
Light flashes alternately with red and blue;
Stand by mode, ready for connection.
Blue light: working mode
Red light: network failure

2 Press the button " \equiv "

8.1Pair the Gateway with APP

 Activate the App on mobile





Select the [Gateway]

Select [G2]



Ilug the gateway and power on it, when the light flashes alternately with red and blue





Add Gateway



• Finish paring gateway

Notice: If times out, please power on the gateway and try it again.

8.2 Remote Unlock

Under the lock setting, you shall first turn on the remote unlock function as the below photo. then you can click the unlock sign near the round circle, there isone tip for remote unlock, you can click it and unlock the door remotely.





9. Troubleshoot and Solution(FAQ)

Question 1:

Can I unlock the door with my fingerprint at first time?

Answer: After you finish the installation and power on the lock with 4pcs AAA alkaline battery and you can press any fingerprint to unlock the door, to ensure you can access the door before you configure the lock with mobile APP.

Question 2: What kind of battery shall we use?

Answer: This lock is highly recommended to be powered on by 4pcs AAA alkaline battery, do not use any other batteries or other Zn/Mn batteries!

Question 3:

Is the lock auto locked?

Answer: After you unlock the door one time, the door will wait for the lock after 5 seconds, close the "Front-panel" to lock.

Question 4:

I bought one lock for my friend, how can he add the lock with his mobile?

Answer: Please remove this device from your mobile App you can click the "**Delete**" to reset the lock or hardware reset the lock refer to page 5 for details.

Question 5:

I insert the manual key and turn but I can not unlock the door.

Answer: Please insert the manual key and Opening and closing panel unlocking, refer to the photo below:



Question 6: Is it possible to remotely unlock my door?

Answer: One extra gateway is required for remote unlock, please turn to our sale service line, after configuration, you can press the icon on the app to remote unlock, please refer to page 25.