SMART LOCK GATEWAY

G4

User Manual

SMART LOCK GATEWAY G4

Model :	G4
Dimensions :	110mm x 110mm x 35mm
Network :	4G (TD-LTE)
Power interface :	DC
Power input :	5V/500mA

Light Status

When the Gateway is powered on:

- Flashing Red/Blue lights: Stand-by mode - Ready to Pair
- Blue light: Normal mode
- Red light: Network failure

Pair the Gateway with APP

1. Open the APP

2. Tap the "☰" icon on the top left of the screen

3. Select [**Gateway**]

4. Select [**G4**]



5. Connect the power supply and insert the SIM card
(Nano SIM card.Size of 12.3*8.8mm)

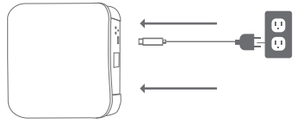

6. Tap "Next step" when the red and blue light flash alternatively

7. Tap " + " to add the gateway

⚠ Notice: If the above process times out, please power off and try again.

Disclaimer

We continuously optimize products as new technologies and features are developed. For this reason, we reserve the right to make alterations to the products without prior notice.

SMART LOCK GATEWAY

G4

Manual

GATEWAY G4

Model :	G4
Mål:	110mm x 110mm x 35mm
Netværk:	4G (TD-LTE)
Strømgrænseflade:	DC
Strømindgang:	5V/500mA

Lysindikator

Når gatewayen er tændt:

- Lys blinker skiftevis i rødt og blåt: Standby-tilstand, klar til parring
- Blåt lys: Arbejdstilstand
- Rødt lys: Netværksfejl

Par gatewayen med APP

1. Åben TTLock APP

2. Klik på " ☰ " ikonet øverst på venstre side af skærmen

3. Vælg [**Gateway**]

4. Vælg [**G4**]



5. Tilslut strømforsyningen og indsæt SIM-kortet
(Nano SIM-kort. Størrelse: 12,3x8,8mm)

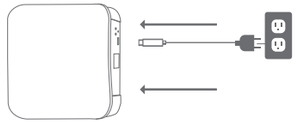

6. Klik på "Next" når lyset blinker skiftevis i rødt og blåt

7. Klik på "+"-tegnet for at tilføje gatewayen

⚠ Bemærk: Hvis timeout, sluk venligst og prøv igen.

Disclaimer

We continuously optimize products as new technologies and features are developed. For this reason, we reserve the right to make alterations to the products without prior notice.